

**Thank you!** for choosing FUSION GOL as your Internet and IP Phone provider. This guide is for customers of the **GOL/eAccess ADSL + IP Phone** service using the **NEC Aterm DR304CV** VoIP modem/router. Please be aware that the router interface is available only in Japanese. If your web browser can not display Japanese characters, you will need to pay special attention to the images and enter the necessary information based on location.



**Before you begin**

Your PC or Macintosh must be configured to use your network adapter as the default method of connection. The process for doing so differs depending on the operating system you use so in the case that you are not able to get past Step 1 (below), please contact the FUSION GOL Customer Center for further instructions.

**Step 1** **Configuring the VoIP Router**


- 1 Open a web browser (ie. Internet Explorer) and enter <http://web.setup/> in the address box to enter the "Quick Setup" interface. In the event that this is unsuccessful, please try entering the IP address directly - **192.168.0.1** The following screen will appear.



This screen will only appear the first time you connect to the router or if for any reason you are forced to reset the router to factory defaults.

Please be sure to keep a memo of your password in a secure place. If you forget your password, your VoIP modem needs to be reset to factory defaults.

JavaScript must be enabled on your computer for the Quick Setup page to function properly. If you get an error message, call FUSION GOL Customer Center for further assistance.

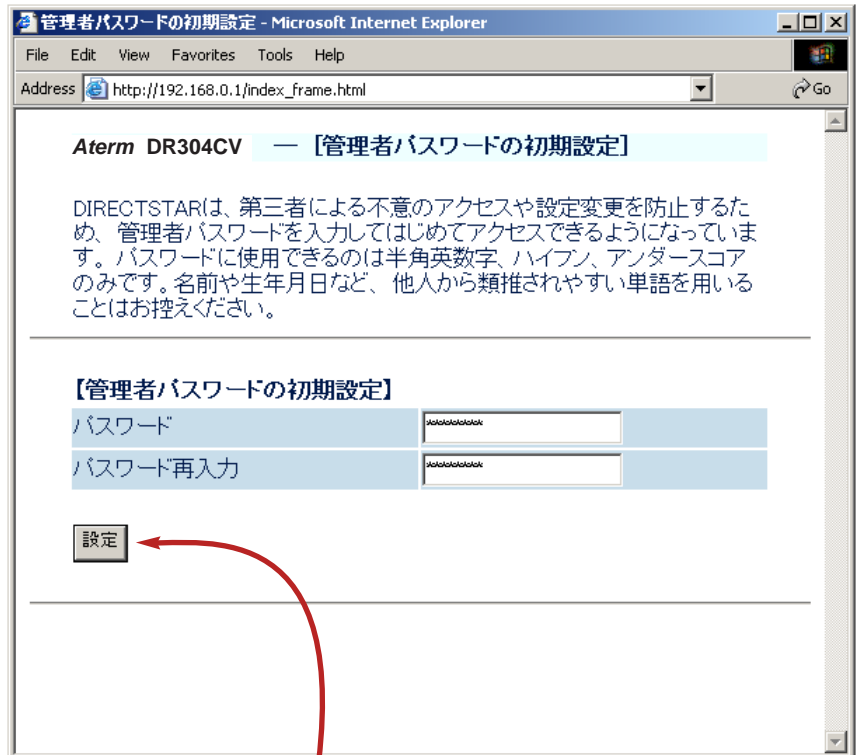

- 2 Choose an Administrator Password for your VoIP router and enter it twice in the spaces provided and then click the **SET** button to continue to the next screen.
- 3 Wait for a second as the next screen loads. If the two passwords did not match perfectly, you may be asked to enter them again. Only letters, hyphens, and under-scores are permitted. In at any time in the future you need to this router web interface, you will be prompted for a User ID and Password. Type **"admin"** as the User ID along with the password you choose here.

- 4 Choose **Configuration a** from the drop-down menu here.



Since you are unable to see your password as you type it, you may want to first type your password into a simple text editor like Notepad and then copy and paste it into the password box to ensure it is entered correctly. Remember, it is case-sensitive.


**Configuration**

**Service Name**

**User Name**

**Password**

- 5 You may put anything you like into the **Service Name** box although we recommend using “**GOL**” to keep things simple.
- 6 In the **User Name** box:  
If you are an existing eAccess ADSL user upgrading to our IP-Phone service, you will already be familiar with the user name format.  
**1/24Mbps: xxx@dsl.gol.com**
- 7 Type in your current **GOL PASSWORD** in the last box. This is NOT the same as the admin password you chose just a minute ago.
- 8 Click the **SET** button to save your settings
- 9 Immediately after clicking **SET**, the page will reload to a Japanese text message which says your settings are being saved and to please wait about 30 seconds. Shortly after, the following message pops up and says that the settings have been saved. Click **OK** and continue to **Step 2: Connecting to the Internet**

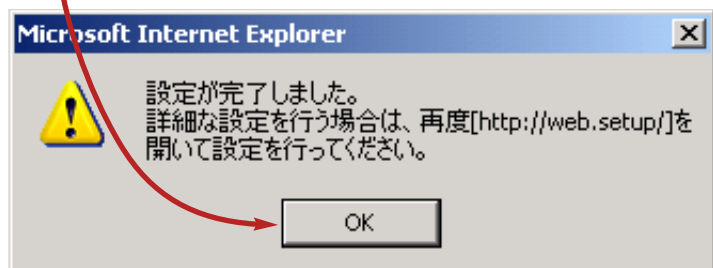

**Continue >**

**Step 2**

**Connecting to the Internet**

- 1 Wait as the VoIP router resets. When the PPP lamp stops flashing and becomes solid, you are online!



*It would be a good idea to pay attention to the lights on your VoIP router at this point. As it restarts, you will notice that different lights will come on, go off, and flicker. This is normal so don't worry. After a minute or two, you will see the **LINE** and **LAN** lights become solid. The **PPP** light might continue to blink for a short time after and then it too will become solid. This is your signal that the ADSL connection was successful! If you ever experience trouble with your ADSL connection, you should always check the status of your router lights. A blinking **LINE** light indicates that the router cannot detect an ADSL signal. A blinking **PPP** light indicates that PPPoE authentication was unsuccessful.*

- 2 Test your Internet connection by opening any web page (try <http://www.gol.com>). If all is well, please proceed to **Step 3: Configuring your IP Phone Service**



*If the PPP lamp continues to flash, double-check your User ID and password. (Return to **Step 1: Configuring the VoIP Router**)*

*If the PPP lamp is STILL flashing, the device must be reset to factory defaults and re-configured. (Instructions provided below.)*

**--Restoring the Router to Factory Defaults--**

This process will delete ALL configurations currently saved and is only necessary if you have forgotten your administration password to access the router configuration.

1. Unplug the AC adapter from the VoIP router.
2. Plug it back in to the router now and push (hold) the "Initialize" button within 10 seconds. Release when PPP lamp begins to flash.

**Step 3**

**Configuring your IP Phone Service**



*Before you can continue with your IP Phone configuration, you will need to have your "**IP-Phone Service Account Details**" sheet in front of you containing your **IP Phone Number, Account ID and IP Phone Password**. We send these out as soon as we receive confirmation from eAccess so you should have received it well before your service start date. If for some reason, it never arrived or it has been misplaced, please call our Customer Center (0120-987-800) to arrange another to be sent.*

- 1 Right. Now with your new high-speed ADSL connection working splendidly, just open up a web browser and proceed to the following address:

<http://www.0038.net/ip-phone/certify.html>

- 2 You'll see this little pink box appear. Type **FUSION** in the **ID** box and **GOL** in the **Password** box. (exactly as shown)

ID	<input type="text" value="FUSION"/>
パスワード	<input type="text" value="GOL"/>

- 3 Click **Submit** to continue on.

送信	リセット
----	------

**Continue >**

# IP Phone (VoIP) Setup Guide

- 4** What's this? Another little pink box?? This is where you need to refer to your **IP-Phone Account Details Sheet** mentioned earlier. Locate your **Account ID** and **IP Phone Password** and type them in to the corresponding boxes.



Your **IP-Phone Service Account Details** sheet contains English translations of pertinent information only (in **RED** text). However, a full text English translation is provided on our website at <http://www.gol.com/phone/>

IP加入電話番号 (IP Phone Number)	アカウントID (AccountID)	IP加入電話パスワード (IP Phone Password)
05012345678	815012345678	password

Account ID

IP Phone Password

- 5** Remember your IP Phone Password is case-sensitive and must be typed exactly as shown. When you are confident that the information is correct, click **Submit**. The next screen is shown below.



After clicking **Submit**, (above) your IP Phone data will be sent to your VoIP router. You may be prompted to provide your administrator password that you chose at the beginning of this guide. If so, just type in **admin** for the User ID and whatever you chose as the password and click the **OK** button.

Return (to top page)

- 6** The message in grey says that your IP Phone settings have been sent to your router. Watch your router lamps again and when the VoIP lamp lights up (becomes solid green), you can start using your IP Phone! The **Return** button is only to be used if the VoIP link cannot be established and you need to re-enter your information again. Thanks for choosing **FUSION GOL!**